

How To Use The Carpet Cleaner

1. Plug in machine using **Yellow Power Cord**.
2. Turn machine on using the **On/Off Switch** on back of the handle.
3. Press Large **Green Reclining Lever** at back of machine to recline handle.
4. Hold **Red Soap Trigger** and push machine forward to apply soapy water to your carpet.
5. Once you've gone your desired distance let go of the **Soap Trigger** and **pull machine backwards** to vacuum up dirt from the carpet.

Repeat steps 4-5 once more **without pressing Soap Trigger**.

You may notice debris coming out of the carpet. This is completely normal and a sign of the machine deep cleaning your carpets.

To Empty/Fill Machine

Remove top cover by moving top grey handle forward.

The top reservoir is the dirty water. Simply remove and pour down sink to empty container.

Bottom reservoir is clean water. Fill with clean hot water and pour two cups of carpet cleaner solution using the clean water reservoir cap.

Always fill clean water tank with hot water before adding the cleaning solution. Do NOT use boiling water in the machine.


To Use Accessory Tool

To connect pull open **green cap** located on the top cover of the machine.

Line up the accessory tool opening with the instructions on the top cover. Twist main hose into place. Then place and twist accompanying soap cord into the soap connector located next to the flow indicator on the grey part of the machine.

To use tool, pull trigger to apply soap to carpet.

Note: Your machine is equipped with a circuit breaker that will automatically shut off the brush if a large or loose object is caught in the brush roll. If that happens, unplug your machine, remove the foreign object and then plug machine in to reset the circuit breaker.

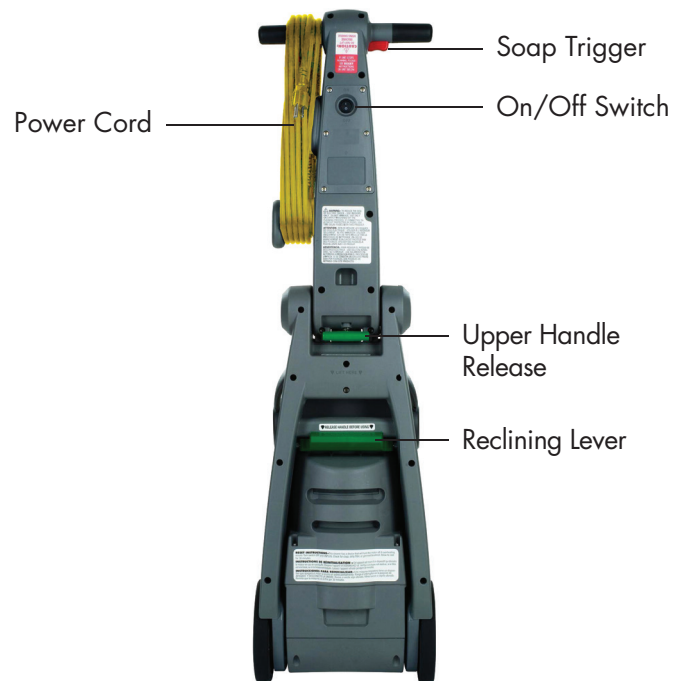

CAUTION: Do not over wet. Take care not to run over loose objects or edges of area rugs. Stalling brush may result in premature belt failure.



CAUTION: Do **NOT** run over the yellow electrical cord with the machine. You will severely damage the cord and may be electrocuted as a result.

Important Safety Instructions

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR COMMERCIAL DEEP CLEANER BG10.

SAVE THESE INSTRUCTIONS.

THIS MODEL IS FOR COMMERCIAL USE.

⚠️ WARNING:

To reduce the risk of fire, electric shock, or injury:


- Do not immerse.
- Use only on surfaces moistened by cleaning process.
- Always connect to a properly grounded outlet.
- See Grounding Instructions.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave machine when it is plugged in.
- Do not service machine when it is plugged in.
- Do not use with damaged cord or plug.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, please call us at 780-701-5112.
- Use indoors only.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Unplug by grasping the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot or burning objects.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.).
- Do not modify the 3-prong grounded plug.
- Do not allow to be used as a toy.
- Do not use for any purpose other than described in this user's guide.
- Do not unplug by pulling on the cord.
- Use only manufacturer's recommended attachments.
- Always install float before any wet pick up operation.
- Keep openings free of dust, lint, hair, etc.
- Do not point attachment nozzle at people or animals.
- Keep appliance on a level surface.
- Do not use without intake screen filter in place.
- Turn off all controls before unplugging.
- Unplug before attaching the TurboBrush®.
- Be extra careful when cleaning stairs.
- Close attention is necessary when used by or near children.

⚠️ WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only ASTONIZE cleaning fluids intended for use with the deep cleaner. Non-ASTONIZE cleaning solutions may harm the machine.

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

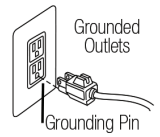

⚠️ WARNING:

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used.

Troubleshooting

Reduce Spray Or No Spray

1. Water tank may be empty. **REMEDY:** Fill clean tank with hot tap water.
2. Tank may not be seated completely. **REMEDY:** Turn power OFF (O). Remove and reseat tank.
3. Pump may have lost prime. **REMEDY:** Turn power OFF (O) and then back ON (I). Wait one minute, then depress trigger.
4. Debris filter on base is clogged. **REMEDY:** Use hand to remove debris.

DirtLifter® PowerBrush Does Not Turn

1. The unit is in the upright position. **REMEDY:** Brushes only rotate when unit is reclined using the detent pedal.
2. Circuit breaker on machine may have tripped. **REMEDY:** Turn the machine OFF (O) and unplug from outlet. Check to see if foreign object is caught in brush roll. Remove object. Plug machine in to reset circuit breaker.

Cleaner Not Picking Up Solution

1. Tanks may not be seated properly. **REMEDY:** Pick up both the clean and dirty water tanks and reseat them so they fit snugly on the unit.
2. Clean water tank is empty. **REMEDY:** Check fluid levels in clean water tank and refill if necessary.
3. Dirty water tank has picked up the maximum amount of dirty water the red float door has closed. **REMEDY:** Empty dirty water tank. Refill clean water tank with water and formula. Place both tanks back onto unit.
4. Red float "door" in the tank may have closed as a result of bumping an object or moving machine back and forth too quickly. **REMEDY:** Turn the machine OFF (O), allowing red float door to release into the open position. Turn the unit back ON (I) to continue cleaning. Be sure your forward and backward strokes are completed at a slower pace.
5. Front nozzle of machine is clogged. **REMEDY:** Use fingers to remove any debris from this area.
6. Upper body filter is clogged. **REMEDY:** Use fingers to remove any debris from this area.